


CS75XX, CS81XX, CS41XX Series Spring Return Direct Coupled Actuators CS75XX, CS81XX, CS41XX 系列弹簧复位执行器

INSTALLATION INSTRUCTIONS • 安装指导

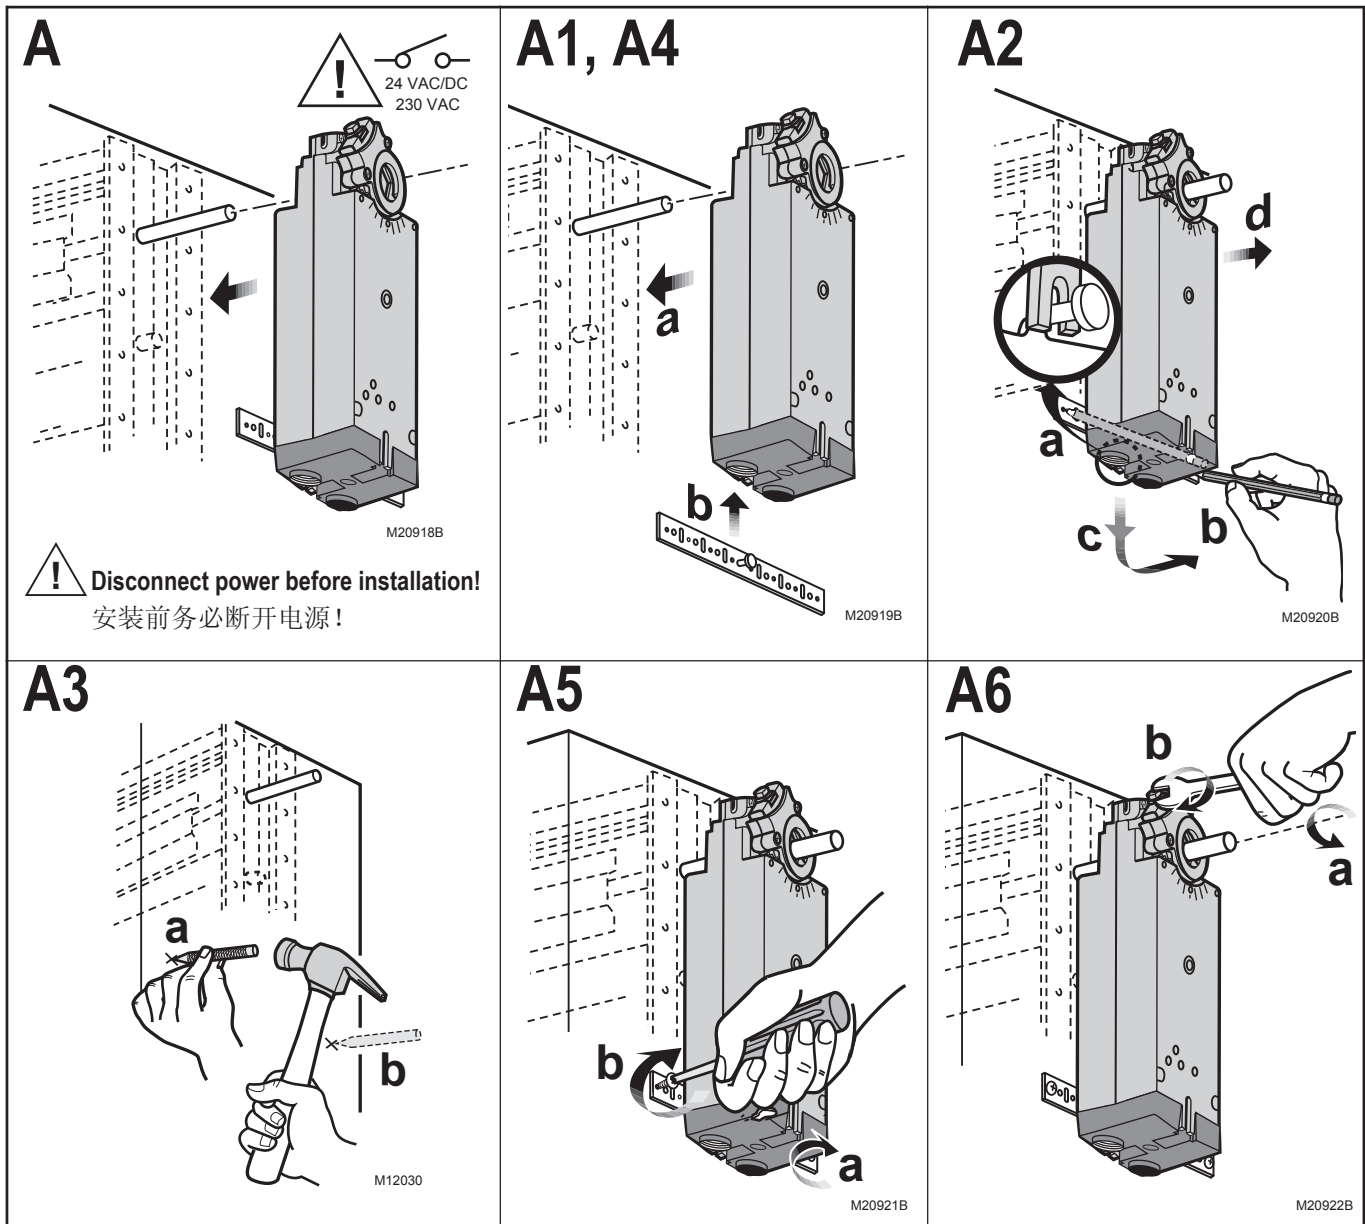

B1a CS75XX MODULATING

CS75XX 调节型控制

△ SET SWITCH TO MODULATING. 设置模式旋钮到modulating.

B1b CS75XX FLOATING

CS75XX 浮点型控制

△ SET SWITCH TO FLOATING. 设置模式旋钮到floating.

B1c CS75XX SPST on/off control

CS75XX 单刀单掷开关型控制

△ SET SWITCH TO MODULATING. 0-10VDC OR 2-10VDC. 设置模式旋钮到modulating 0-10VDC或者2-10VDC。

△ LINE VOLTAGE POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED. 电网供电，需提供断路和过载保护功能。

△ 24 VDC SUPPLY ACCEPTABLE. 可用24V直流供电。

△ ENSURE PROPER GROUNDING OF ACTUATOR CASE. 确保执行器壳体正确接地。

B2 CS81XX 2-POS

CS81XX 开关量控制

△ LINE VOLTAGE POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED. 电网供电，需提供断路和过载保护功能。

△ ENSURE PROPER GROUNDING OF ACTUATOR CASE. 确保执行器壳体正确接地。

△ 24 VDC SUPPLY ACCEPTABLE. 可用24V直流供电。

B3 CS41XX 2-POS

CS41XX 开关量控制

△ LINE VOLTAGE POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED. 电网供电，需提供断路和过载保护功能。

△ ENSURE PROPER GROUNDING OF ACTUATOR CASE. 确保执行器壳体正确接地。

B4 FEEDBACK SWITCHES(SW2-CS)

外部反馈开关

B5 SYLK-BUS (Models with sylk-bus only)

(仅针对具有silk-bus功能的型号)

INTENDED TO BE INSTALLED WITH A FLEXIBLE METAL CONDUIT. 推荐用柔性金属软管安装。

△ LINE VOLTAGE POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED. 电网供电，需提供断路和过载保护功能。

△ 24 VDC SUPPLY ACCEPTABLE. 可用24V直流供电。

Direct

Reverse

	A	B	C
G	1	6	11
H	2	7	12
I	3	8	13
J	4	9	14
K	5	10	15
L	Test	Test	Test

M34297

Honeywell

Automation and Control Solutions

Honeywell ECC(Tianjin) Co.,Ltd
NO.158, Nanhai Road, TEDA
Tianjin, 300457, P.R.C.

50098514-001 Rev.A