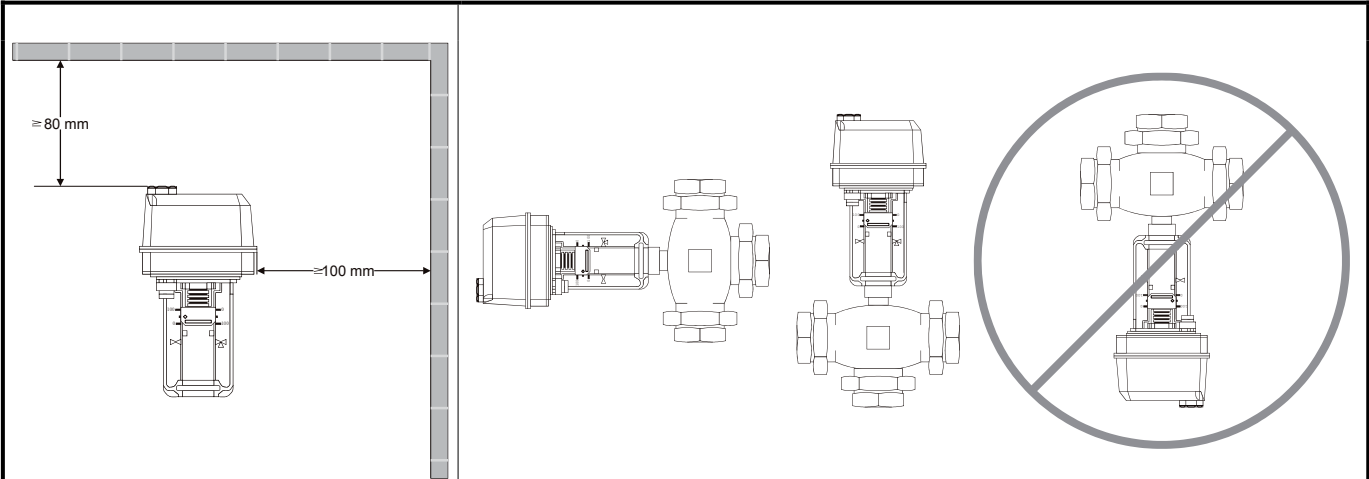
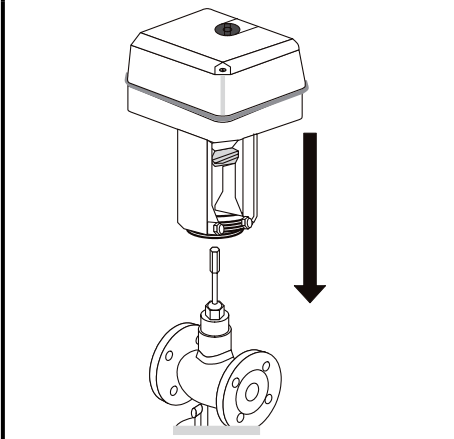


ML7420A8088
Electric Linear Valve Actuator

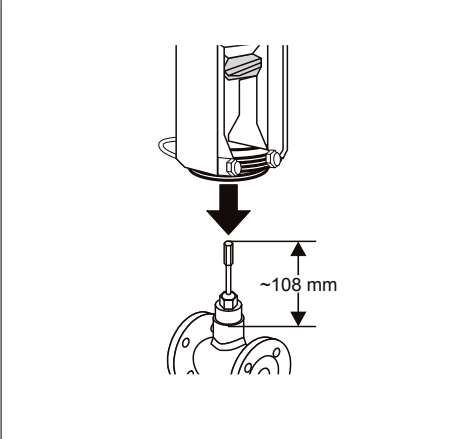
INSTALLATION INSTRUCTIONS·安装说明




A1-A7: Installation·安装




A1




A2

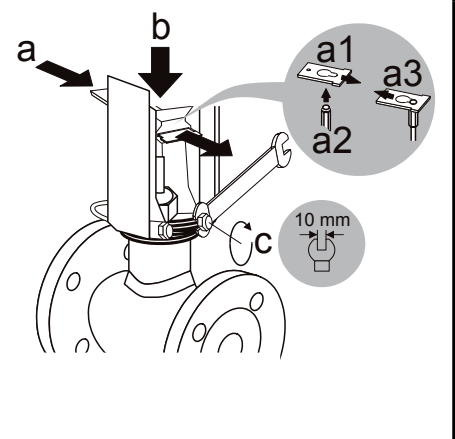


A3











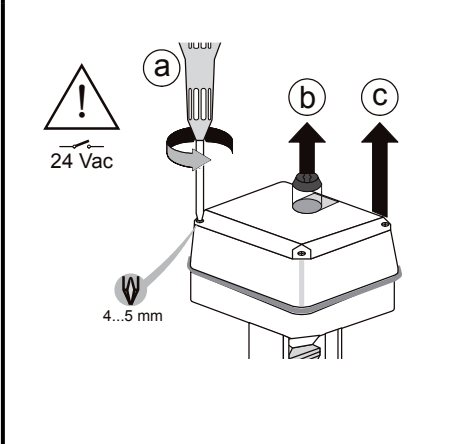


A4

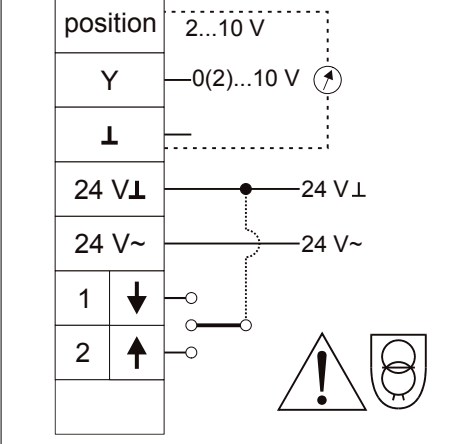

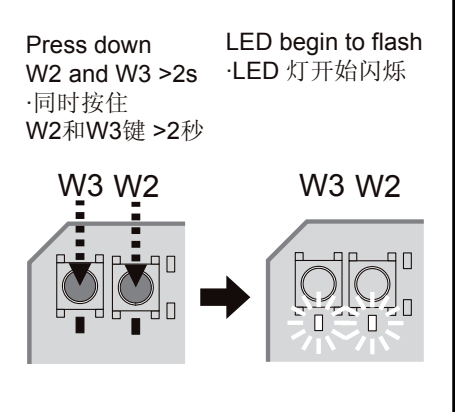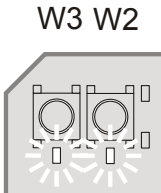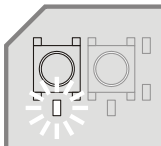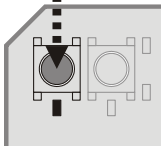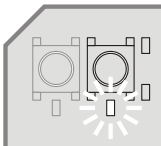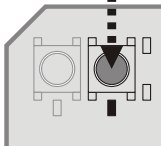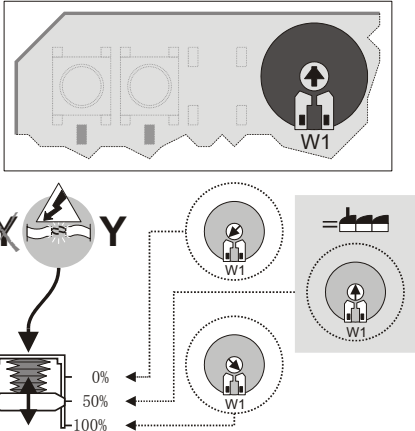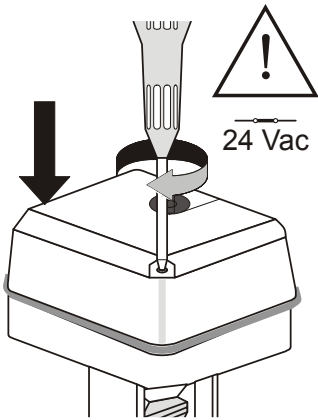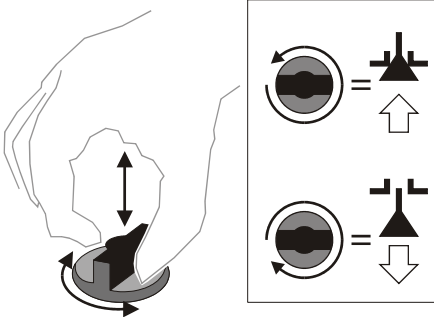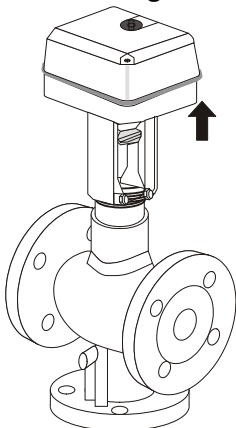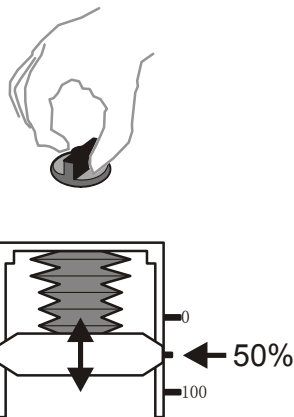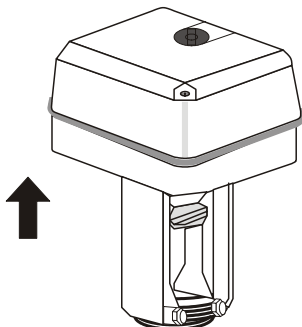A5a: Go into self-adaption mode
·进入自适应模式



A5b LED stop flashing and complete self-adaption. ·LED灯停止闪烁, 自适应完成 	A6a W3  0(2) V ↕ 10 V  W3  10 V ↕ 0(2) V 	A6b W2  0 ... 10 V  W2  2 ... 10 V 
A6c 	A7 	B: Manual·手动操作 
C1-C2: Dismounting·拆除 	C1 	C2 A3→A4→A2→A1 

Automation and Control Solutions

Honeywell (Tianjin) Limited
No. 158, NanHai Road
Tianjin Economic-Technological Development Area
Tianjin, 300457, P.R.C.
Phone: +86-22-66287000
Fax: +86-22-25325214

Subject to change without notice.