



Honeywell


Liquid Pressure Transmitter

说明书 / Instructions

产品尺寸和安装 / Dimensions and Installation

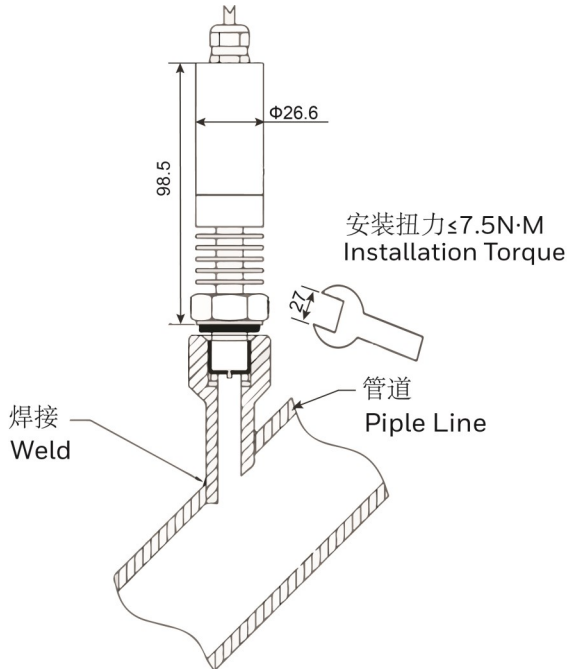

 禁止旋转顶部接头。
Do not rotate the top joint.

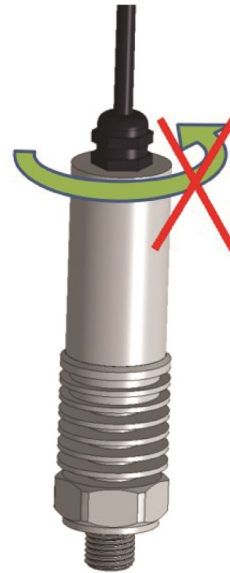

出线方式 / Wiring Mode

4-20mA输出 / 4-20mA Output



0-10V输出 / 0-10V Output



注意事项 / Precautions:

- 如果导气孔堵塞，禁止使用尖锐物体疏通气孔，请及时联系维修服务人员。
If the air hole is blocked, it is forbidden to use a sharp object for clear. Please contact the maintenance and service personnel.
- 建议主要使用于空调水。如果检测介质为粘稠液体，请与我们联系以满足您的应用要求。
It is suggested to mainly use the transmitter for the air-conditioner water. If you need a transmitter for viscous liquids, please confirm with us to meet your requirements.