

溫度傳訊器使用說明書 Temperature Sensor (NTC20k/Pt1000 Output) Manual

感謝您購買本公司的產品！為使產品能正常運作，請您詳閱使用手冊，並請依照說明操作。謝謝！
Thanks for choosing our product ! Please read carefully and follow this instruction before using!

產品附件清單 Product accessories list

1. 產品：壁掛式 Wall mount

附件：如下

傳訊器	數量：1
螺絲	數量：4
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

2. 產品：水管式 Immersion / Outside Air mount

附件：如下

傳訊器	數量：1
防水電纜固定頭	數量：1
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

3. 產品：風管式 Duct mount

附件：如下

傳訊器	數量：1
法蘭	數量：1
防水電纜固定頭	數量：1
螺絲	數量：4
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

安裝方式 Installations


- 請選定安裝傳訊器的位
Please decide right position for installation.
- 將底座以螺絲固定在欲安裝的牆面或裝線盒上
Fix the base with screws on the wall
 - 請依接線圖連接訊號線 (電阻輸出,請參考接線圖一)
Please refer Figure 1 (Resistance output).
 - 將 PC 板(面朝上)，插入接線端子台，並將 PC 板嵌入正確位置
Connect properly the PC board to the terminal (on top)
- 安裝線材請採用隔離線(15AWG / 17AWG / 22AWG)
Please apply 15AWG / 17AWG / 22AWG cable for installation.

***注意：接線前後，請勿接上電源，以免造成機板損壞，或發生危險**



Notice: Please remove power from unit before wiring input and output connection, in order to avoid any damage or hazard..

接線方式如下：Please refer to the wiring Figures as following：

端子接線方式 Wiring figure

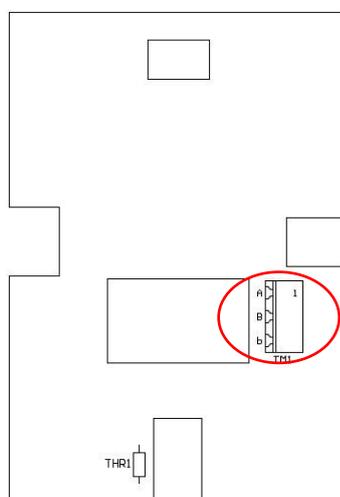

圖一
Figure 1

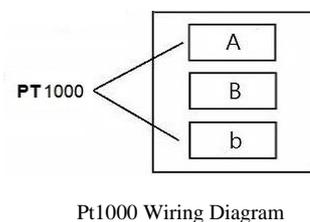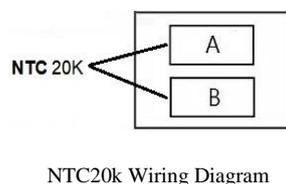

** NTC 20K 2-wire 式 sensor 直接連接 "A, B" 端子輸出；若 Pt1000 3-wire 式 sensor 直接連接 "A, B, b" 端子即可。

NTC 20K 2-wire type directly connected to the "A, B" terminal output; if Pt1000 3-wire directly connected "A, B, b" terminal output.